

# Specification & Installation Guide

#### **Features**

- Free standing 48" vanity: 33"(838mm)H x 22"(560mm)D x 47-5/8" (1210mm)W
- Furniture grade plywood layered with solid wood veneer and protected with several coats of polyurethane (No particle board or MDF used)
- · Matching finish inside out
- Two fully adjustable drawers with full-extension soft-close European hardware
- Drawers include adjustable tempered glass dividers and retainers

L-FEET


• Feet option: 4 L-feet or 2 S-feet in polished chrome or brushed nickel.


#### Top/Basin options


- Quartzstone<sup>™</sup> top & White ceramic basin
- Glossy White X-Stone top/basin
- Glossy or Matte White X-Stone flat countertop
- Tempered glass top and ceramic basin

### **Package Dimensions**

52"x 26"x 30"

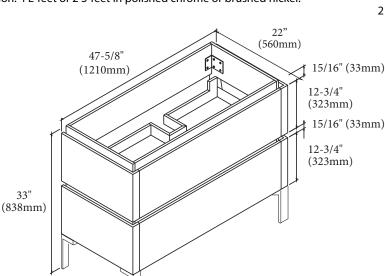

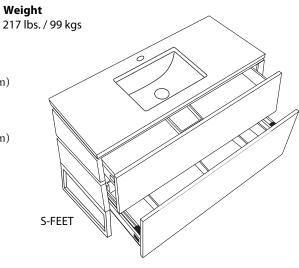

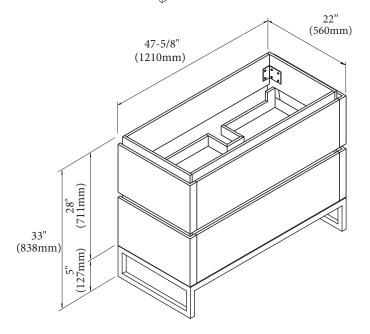




01 | Page


For clarification, please contact Madeli Customer Care at (800)-819-6988 or (305)-718-8817 Ext. 1

All dimensions are approximate and subject to standard tolerance. Specifications subject to change without prior notice.



# Specification & Installation Guide

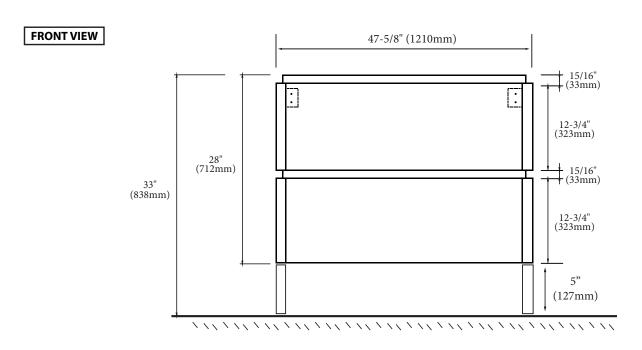

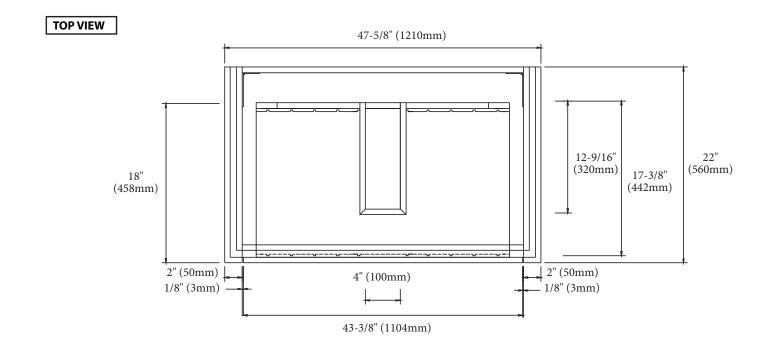



02 | Page

For clarification, please contact Madeli Customer Care at (800)-819-6988 or (305)-718-8817 Ext. 1 All dimensions are approximate and subject to standard tolerance. Specifications subject to change without prior notice.



# Specification & Installation Guide

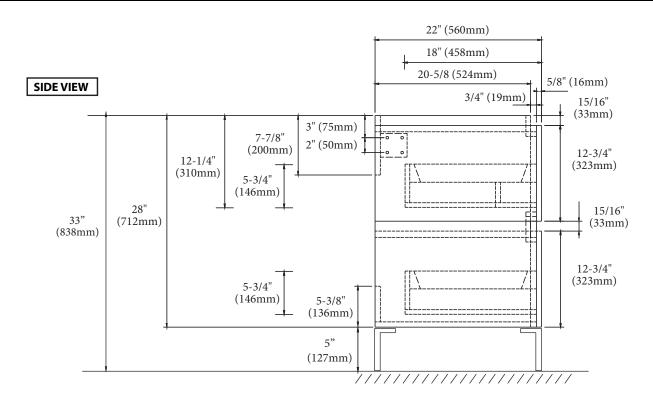


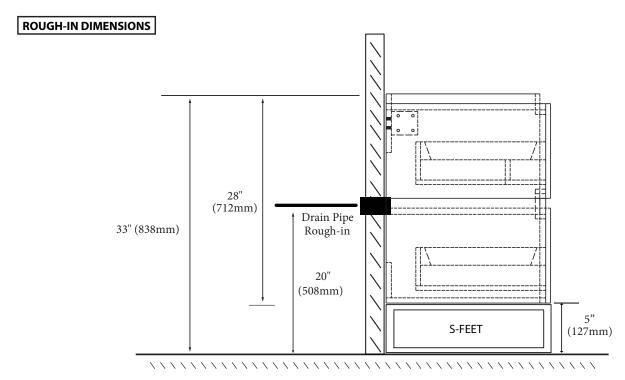

03 | Page

For clarification, please contact Madeli Customer Care at (800)-819-6988 or (305)-718-8817 Ext. 1 All dimensions are approximate and subject to standard tolerance. Specifications subject to change without prior notice.

All Rights Reserved - 2016






# Specification & Installation Guide

### INSTALLATION INSTRUCTIONS

- Install feet
  - 1. Place feet in indicated positions.
  - 2. Mark screw locations.
  - 3. Pre-drill holes with 5/64, 3/32 or 7/64 drill bit about 1/2" deep.
  - 4. DO NOT OVER TIGHEN THE SCREWS. DOING SO WILL SPLIT THE WOOD SIDE PANEL.
  - 5. If using a regular battery drill, set clutch to minimum and increase setting as needed.
  - 6. DO NOT USE AN IMPACT DRILL. IT WILL SPLIT THE WOOD SIDE PANEL.

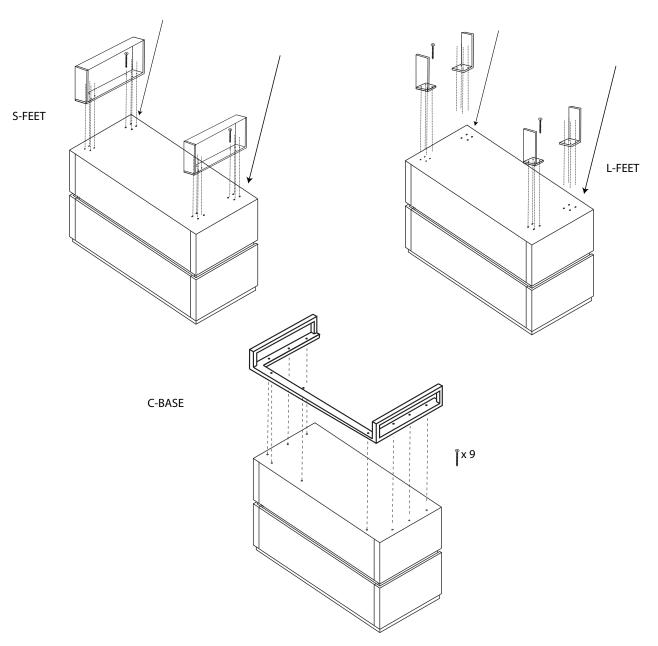

For clarification, please contact Madeli Customer Care at (800)-819-6988 or (305)-718-8817 Ext. 1

All dimensions are approximate and subject to standard tolerance. Specifications subject to change without prior notice.


04 | Page



# Specification & Installation Guide

# **CABINET PLACEMENT & INSTALLATION** - SECURE CABINET TO WALL

- 1) Level cabinet in position
- 2) Secure cabinet with screws in drywall studs
- 3) Install countertop with silicone

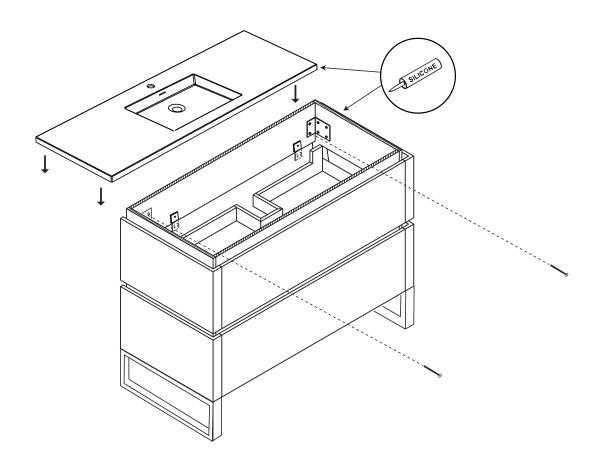

For clarification, please contact Madeli Customer Care at (800)-819-6988 or (305)-718-8817 Ext. 1

All dimensions are approximate and subject to standard tolerance. Specifications subject to change without prior notice.

Rev. 01/01/2021

All Rights Reserved - 2016

05 | Page